


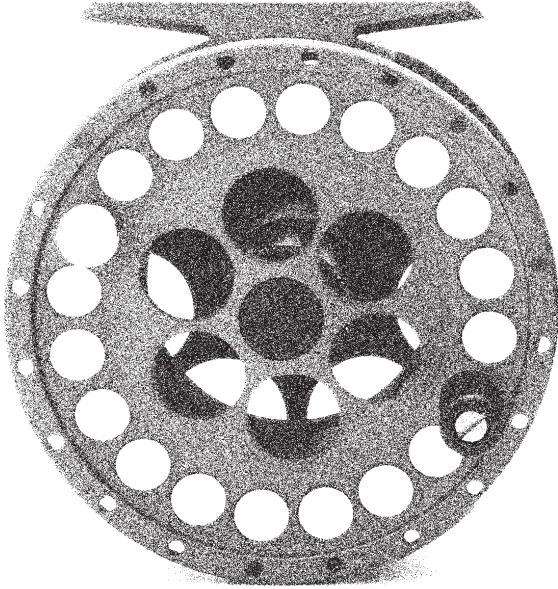

VALU & KALU 34 | 56 | 78
OWNERS MANUAL



Kätisyyden vaihto vasenkätisestä oikeakätiseen kelaukseen

1. Poista (33) puola.
2. Kierrä (30) jarrupesän korkki irti.
3. Ota/ravista (28) yksisuuntalaakeri ulos, käännä se ympäri ja laita takaisin.
4. Kierrä (30) jarrupesän korkki paikoilleen.
5. Mene kalaan!

Kelan huolto

Huuhto kela makealla vedellä merivesikäytön jälkeen.


Pidä kela puhtaana.

Rasvaa kelan liikkuvat osat (erityisesti yksisuuntalaakeri, osa 28) kerran vuodessa.

Vision Group Ltd
Niinistökatu 1
05800 Hyvinkää
Finland

service@visiongroup.fi

For service centers visit:
www.visionflyfishing.com

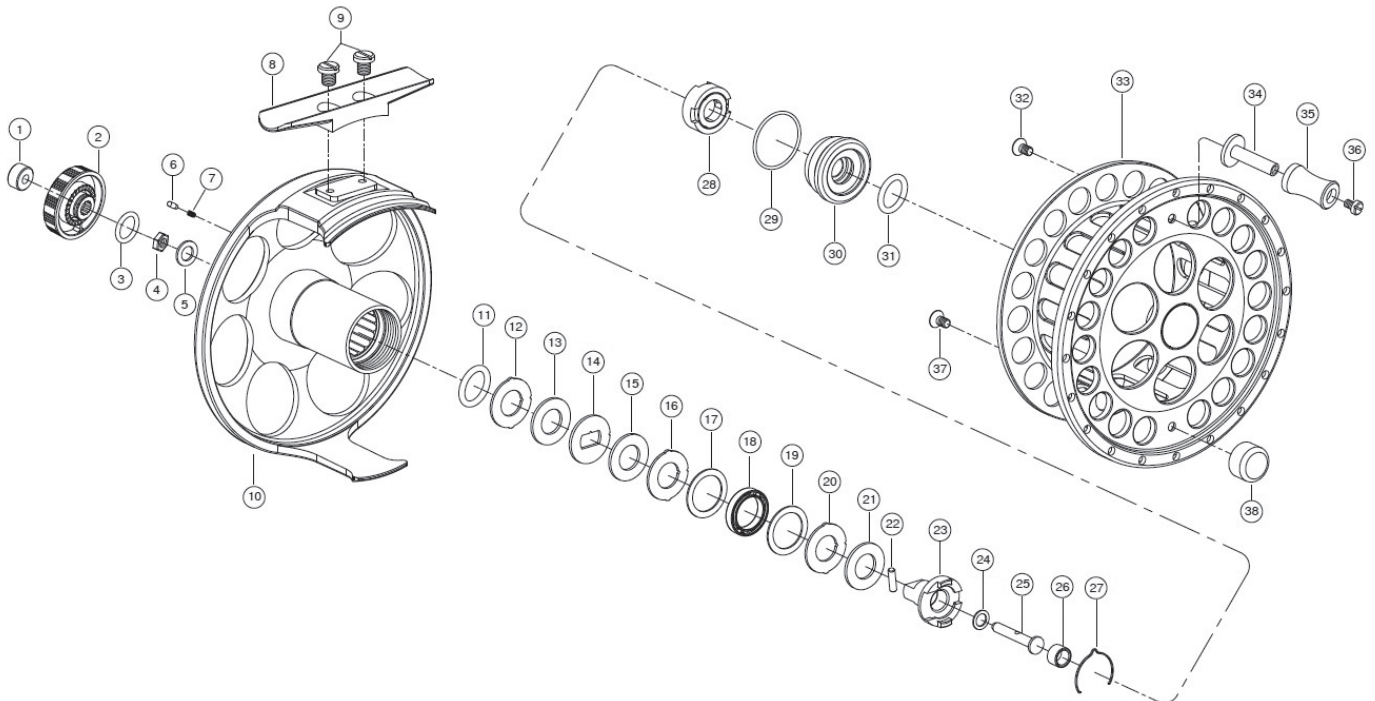

KEY NO	PART NAME	KEY NO	PART NAME	KEY NO	PART NAME	KEY NO	PART NAME	KEY NO	PART NAME
1	DRAG KNOB CAP	10	FRAME	19	WASHER THIN	28	O/WAY ASSEMBLY	37	SCREW (BALANCE)
2	DRAG KNOB	11	O-RING (DRAG)	20	"A" WASHER	29	O-RING	38	BALANCE
3	O-RING (D/K)	12	"A" WASHER	21	DRAG WASHER (CARBON)	30	HOUSING CAP	39	
4	NUT	13	DRAG WASHER (CARBON)	22	SHAFT PIN	31	O-RING	40	
5	DRAG KNOB SEAL	14	"D" WASHER	23	DRAG CLUTCH	32	SCREW (H/R)	41	
6	CLICK PIN	15	DRAG WASHER (CARBON)	24	SPRING WASHER	33	SPOOL	42	
7	CLICK SPRING	16	"A" WASHER	25	SHAFT	34	HANDLE RIVET	43	
8	FOOT	17	WASHER THIN	26	INSERT	35	HANDLE KNOB	44	
9	SCREW (FOOT)	18	BALL BEARING	27	CLICK SPRING	36	HANDLE KNOB SCREW	45	